

■ Additional sheet

■ VF-S15 : UL standard and CSA standard

UL / CSA 規格に適合する VF-S15 には、定格銘板に cULus マークが記載されています。
この追加取扱説明書は、UL61800-5-1 に適合するための訂正と追加情報です。
形式には、末尾に -W1、Y-Axx (xx は特定のコード) や、文字と数字の組み合わせが追加
される場合があります。

UL61800-5-1 および CSA 22.2 No.274 に適合するために、特に記載のない場合、
他の取扱説明書より、本追加取扱説明書の記載内容を優先して適用してください。

インバータ本体取扱説明書 E6581610(和文)、E6581612(和文)、E6582175(英文)、
またはクイックスタートマニュアル E6581928(英文)に記載の安全上のご注意、表示、および
図記号なども合わせてご確認ください。

VF-S15 that comply with UL/CSA Standard have the cULus mark on the nameplate.
This additional manual is the correction and additional information to comply UL61800-5-1.
Type-from may have additional suffix -W1, Y-Axx (xx is the specific code) or the combination
of several characters and numbers.

To comply with UL61800-5-1 and CSA 22.2 No.274, please apply this additional manual
description as a priority rather than other instruction manuals, unless otherwise specified.



Confirm the safety precautions, the symbols and the indications described in the instruction
manual E6581610(Japanese), E6581612(Japanese), E6582175(English) or the quick start
manual E6581928(English) together.

定格銘板上の cULus マーク / cULus Mark on the nameplate



E6582383-02

1. General

| | |
|--|---|
|  WARNING / AVERTISSEMENT | |
|  Electric shock | <p>- RISK OF ELECTRIC SHOCK - DANGEROUS VOLTAGE MAY EXIST FOR _15_ MINUTES AFTER REMOVING POWER</p> <p>- RISQUE DU CHOC ÉLECTRIQUE - UNE TENSION DANGEREUSE PEUT ÊTRE PRÉSENTÉE JUSQU'À 15 MINUTES APRÈS AVOIR COUPÉ L'ALIMENTATION</p> |

The following steps must be performed before wiring and servicing.

(1) Turn off all input power.

(2) Wait at least fifteen minutes and check to make sure that the charge lamp is no longer lit.

(3) Use a tester that can measure DC voltage (1000VDC or more), and check to make sure that the voltage to the DC main circuits (across PA/+ and PC/-) is 45V or less.


If these steps are not properly performed, the wiring will cause electric shock.

2. Compliance with Installation

A UL certificate was granted on the assumption that the inverter would be installed in an enclosure. Therefore, install the inverter in an enclosure and if necessary, take measures to maintain the inverter ambient temperature (temperature in the enclosure) within the specified temperature range.

Be sure to apply the minimum enclosure size shown in the remark under Table 3 and Table 4

Standard installation

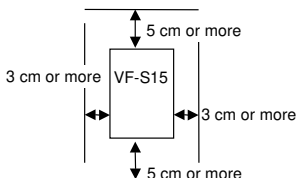

Environments

| | |
|----------------------|--|
| Location of use | Indoors; not exposed to direct sunlight, corrosive gas, explosive gas, flammable gas, oil mist, or dust; and vibration of less than 5.9m/s^2 (10 to 55Hz). |
| Elevation | 1000 m or less |
| Ambient temperature | -10 to +40°C (50°C) Maximum Surrounding Air Temperature 40 °C (with the protective label on the top of the inverter) 50 °C (without the protective label on the top of the inverter, except 0.75 kW or less in 200/240 V class) |
| Storage temperature | -25 to +70°C (Temperature applicable for a short term.) |
| Relative humidity | 5 to 95% (free from condensation and vapor). |
| Pollution degree | 2 |
| Overvoltage category | III |

Current reduction

According to the carrier frequency F300 setting, you may need to reduce the inverter's continuous output current. Reduction rates vary depending on the capacity of the inverter.

[Single-phase/Three-phase 200/240V class]

| Inverter model | Ambient temperature | Input voltage 200V to 240V | |
|-------------------------------|----------------------------------|----------------------------|-----------------|
| | | PWM carrier frequency | |
| | | 2.0k to 4.0kHz | 4.1k to 12.0kHz |
| VFS15-2002PM VFS15S-2002PL | 40°C or less | 1.5 A | |
| VFS15-2004PM VFS15S-2004PL | 40°C or less | 3.3 A | |
| VFS15-2007PM VFS15S-2007PL | 40°C or less | 4.8 A | |
| VFS15-2015PM VFS15S-2015PL | 40°C or less Above 40 to 50°C | 8.0 A 8.0 A | 7.9 A |
| VFS15-2022PM VFS15S-2022PL | 40°C or less Above 40 to 50°C | 11.0 A 11.0 A | 10.0 A |

Note) For 0.75 kW or less in 200/240 V class, maintain the ambient temperature of 40°C or less and the PWM carrier frequency of 4kHz or less for the compliance with UL standard.

Note) For "Above 40°C to 50°C" of the ambient temperature except 0.75 kW or less in 200/240 V class, remove the protective label on the top of the inverter for the compliance with UL standard.

[Three-phase 200/240V class]

| Inverter model | Ambient temperature | Input voltage 200V to 240V | |
|----------------|---------------------|----------------------------|-----------------|
| | | PWM carrier frequency | |
| | | 2.0k to 4.0kHz | 4.1k to 12.0kHz |
| VFS15-2037PM | 40°C or less | 17.5 A | 16.4 A |
| | Above 40 to 50°C | 17.5 A | |
| VFS15-2055PM | 40°C or less | 27.5 A | 25.0 A |
| | Above 40 to 50°C | 27.5 A | |
| VFS15-2075PM | 40°C or less | 33.0 A | 33.0 A |
| | Above 40 to 50°C | 33.0 A | |
| VFS15-2110PM | 40°C or less | 54.0 A | 49.0 A |
| | Above 40 to 50°C | 54.0 A | |
| VFS15-2150PM | 40°C or less | 66.0 A | 60.0 A |
| | Above 40 to 50°C | 66.0 A | |

Note 2) For "Above 40°C to 50°C" of the ambient temperature, remove the protective label on the top of the inverter for the compliance with UL standard.

[Three-phase 400/500V class]

| Inverter model | Ambient temperature | Input voltage 380V to 480V PWM carrier frequency | | Input voltage Above 480V to 500V PWM carrier frequency | |
|----------------|---------------------|---|--------|---|--|
| | | 2.0k to 4.0kHz | | 2.0k to 4.0kHz | |
| | | 4.1k to 12.0kHz | | 4.1k to 12.0kHz | |
| VFS15-4004PL1 | 40°C or less | 1.5 A | 1.5 A | | |
| | Above 40 to 50°C | 1.5 A | | | |
| VFS15-4007PL1 | 40°C or less | 2.3 A | 2.1 A | | |
| | Above 40 to 50°C | 2.3 A | | | |
| VFS15-4015PL1 | 40°C or less | 4.1 A | 3.7 A | | |
| | Above 40 to 50°C | 4.1 A | | | |
| VFS15-4022PL1 | 40°C or less | 5.5 A | 5.0 A | | |
| | Above 40 to 50°C | 5.5 A | | | |
| VFS15-4037PL1 | 40°C or less | 9.5 A | 8.6 A | | |
| | Above 40 to 50°C | 9.5 A | | | |
| VFS15-4055PL | 40°C or less | 14.3 A | 13.0 A | | |
| | Above 40 to 50°C | 14.3 A | | | |
| VFS15-4075PL | 40°C or less | 17.0 A | 17.0 A | | |
| | Above 40 to 50°C | 17.0 A | | | |
| VFS15-4110PL | 40°C or less | 27.7 A | 25.0 A | | |
| | Above 40 to 50°C | 27.7 A | | | |
| VFS15-4150PL | 40°C or less | 33.0 A | 30.0 A | | |
| | Above 40 to 50°C | 33.0 A | | | |
| VFS15-4185PL | 40°C or less | 40.0 A | 34.0 A | | |
| | Above 40 to 50°C | 40.0 A | 34.0 A | | |
| VFS15-4220PL | 40°C or less | 46.0 A | 39.1 A | | |
| | Above 40 to 50°C | 46.0 A | 38.0 A | | |

Note) For "Above 40°C to 50°C" of the ambient temperature, remove the protective label on the top of the inverter for the compliance with UL standard.

Note) VFS15-4185PL and VFS15-4220PL are only -W1 model.

[Three-phase 600V class] (only -W1 model)

| Inverter model | Ambient temperature | Input voltage 525V to 600V PWM carrier frequency | |
|----------------|---------------------|---|--|
| | | 2.0k to 4.0kHz | |
| | | 4.1k to 12.0kHz | |
| VFS15-6015P | 40°C or less | 2.7 A | |
| | Above 40 to 50°C | 2.7 A | |
| VFS15-6022P | 40°C or less | 3.9 A | |
| | Above 40 to 50°C | 3.9 A | |
| VFS15-6037P | 40°C or less | 6.1 A | |
| | Above 40 to 50°C | 6.1 A | |
| VFS15-6055P | 40°C or less | 9.0 A | |
| | Above 40 to 50°C | 9.0 A | |
| VFS15-6075P | 40°C or less | 11.0 A | |
| | Above 40 to 50°C | 11.0 A | |
| VFS15-6110P | 40°C or less | 17.0 A | |
| | Above 40 to 50°C | 17.0 A | |
| VFS15-6150P | 40°C or less | 22.0 A | |
| | Above 40 to 50°C | 22.0 A | |

Note) For "Above 40°C to 50°C" of the ambient temperature, remove the protective label on the top of the inverter for the compliance with UL standard.

Note) Be sure to connect a line inductance, refer to Table 4 for the value.

3. Compliance with Connection

DANGER

The opening of the branch circuit protective device may be an indication that a fault current has been interrupted. To reduce the risk of fire or electrical shock, current-carrying parts and other components of the controller should be examined and replaced if damaged. If burnout of the current element of an overload relay occurs, the complete overload relay must be replaced.

(LE DÉCLENCHEMENT DU DISPOSITIF DE PROTECTION DU CIRCUIT DE DÉRIVATION PEUT ÊTRE DÙ À UNE COUPURE QUI RÉSULTE D'UN COURANT DE DÉFAUT. POUR LIMITER LE RISQUE D'INCENDIE OU DE CHOC ÉLECTRIQUE, EXAMINER LES PIÈCES PORTEUSES DE COURANT ET LES AUTRES ÉLÉMENTS DU CONTRÔLEUR ET LES REMPLACER S'ILS SONT ENDOMMAGÉS. EN CAS DE GRILLAGE DE L'ÉLÉMENT TRAVERSÉ PAR LE COURANT DANS UN RELAIS DE SURCHARGE, LE RELAIS TOUT ENTIÈRE DOIT ÊTRE REMPLACÉ)

Use the UL conformed cables (Rating 75 °C or more, Use the copper conductors only.) to the main circuit terminals (R/L1, S/L2, T/L3, U/T1, V/T2, W/T3).

- ⇒ For recommended tightening torque, see Table 1.
- ⇒ Use the ring terminal for the earth cables, see Table 2.
- ⇒ For recommended electric wire sizes, see Table 3,4.
- ⇒ Use the electric wire of Class1 for the control circuits.

For instruction in the United States, Integral solid state short circuit protection does not provide branch circuit protection. Branch circuit protection must be provided in accordance with the National Electrical Code and any additional local codes.

For instruction in the Canada, Integral solid state short circuit protection does not provide branch circuit protection. Branch circuit protection must be provided in accordance with the Canadian Electrical Code, Part I. .

(LA PROTECTION INTÉGRÉE CONTRE LES COURTS-CIRCUITS N'ASSURE PAS LA PROTECTION DE LA DÉRIVATION. LA PROTECTION DE LA DÉRIVATION DOIT ÊTRE EXÉCUTÉE CONFORMÉMENT AU CODE CANADIEN DE L'ÉLECTRICITÉ, PREMIÈRE PARTIE.)

Table 1 Tighten the screws to specified torque

| Recommended tightening torque for screws on the terminal board | | |
|--|-----|-------|
| | N·m | lb·in |
| M3.5 | 1.0 | 8.9 |
| M4 | 1.4 | 12.4 |
| M5 | 2.4 | 20.8 |
| M6 | 4.5 | 40.0 |
| M4 (grounding terminal) | 1.4 | 12.4 |
| M5 (grounding terminal) | 2.8 | 24.8 |

Table 2 Ring terminal sizes for earth cables

| Earth Cable Sizes | M4 (grounding terminal) | M5 (grounding terminal) |
|-------------------|-------------------------|-------------------------|
| AWG14 | R2-4 [JIS standard] | R2-5 [JIS standard] |
| AWG12 | R5.5-4 [JIS standard] | R5.5-5 [JIS standard] |
| AWG10 | R5.5-4 [JIS standard] | R5.5-5 [JIS standard] |

SCCR, Fuse and Wire sizes

Use the UL listed protective devices at connecting to power supply.

The VF-S15 short circuit current ratings have been obtained by shorting internal components. These ratings allow proper coordination of short circuit protection.

Suitable for use on a circuit capable of delivering not more than ___X___rms symmetrical Amperes, ___Y___ Volts maximum, when protected by ___Z1___ with a maximum rating of ___Z2___.

(CONVIENT AUX CIRCUITS NON SUSCEPTIBLES DE DÉLIVRER PLUS DE ___X___ AMPÈRES SYMÉTRIQUES EFFICACES, MAX. ___Y___ V, AVEC PROTECTION PAR ___Z1___ DE CALIBRE NOMINAL DE ___Z2___.)

Table 3 Standard SCCR condition of Fuses, Circuit breakers, line inductance and Wire sizes, with Enclosure

| Table 5 Standard GCM Condition of Fuses, Circuit breakers, line inductance and wire sizes, with Enclosure | | | | | | | | | | | | | | |
|---|--------------|---------------------------|---------------------|-----------------------|---------------------|---------------|----------|--------------|---------------|------------|----------------------------------|------------------|-------------|--|
| Inverter model | Volt- age | Branch circuit protection | | | | | | | | | (*4) | | Cable sizes | |
| | | With Circuit breaker | With GV□P | | | | | | (*1) Fuse | | Line inductance Min. value | Power circuit | Earth | |
| | | | SC CR | (*2)(*3) Type-Form | Voltage Rating | Power (HP) | SC CR | 600V Class J | | | | | | |
| | | | | | | | | Rating | SCCR | | | | | |
| | Marking | (V) Y | Type-Form Z1, Z2 | (kA) X | Type-Form Z1, Z2 | (V) | (HP) | (kA) X | (A) Z1, Z2 | (SCC) X | mH A | (AWG)- A | (AWG)- A | |
| VFS15-2002PM | 240 | HGL36015 | 5 | GV2P08 | 240 | 0.75 | 5 | 5 | 5 | - | - | 14 | 14 | |
| VFS15-2004PM | 240 | HGL36015 | 5 | GV2P08 | 240 | 0.75 | 5 | 7 | 5 | - | - | 14 | 14 | |
| VFS15-2007PM | 240 | HGL36015 | 5 | GV2P10 | 240 | 1.5 | 5 | 15 | 5 | - | - | 14 | 14 | |
| VFS15-2015PM | 240 | HGL36015 | 5 | GV2P14 | 240 | 3 | 5 | 25 | 5 | - | - | 14 | 14 | |
| VFS15-2022PM | 240 | HGL36020 | 5 | GV3P18 | 240 | 5 | 5 | 25 | 5 | - | - | 12 | 14 | |
| VFS15-2037PM | 240 | HGL36030 | 5 | GV3P25 | 240 | 7.5 | 5 | 45 | 5 | - | - | 10 | 10 | |
| VFS15-2055PM | 240 | HGL36040 | 22 | GV3P40 | 240 | 10 | 22 | 60 | 22 | - | - | 8 | 10 | |
| VFS15-2075PM | 240 | HGL36050 | 22 | GV3P50 | 240 | 10 | 22 | 70 | 22 | - | - | 6 | 10 | |
| VFS15-2110PM | 240 | HGL36070 | 22 | GV3P65 | 240 | 15 | 22 | 100 | 22 | - | - | 6*2 | 8 | |
| VFS15-2150PM | 240 | HGL36090 | 22 | GV4PB80S | 240 | 20 | 22 | 100 | 22 | - | - | 6*2 | 8 | |
| VFS15S-2002PL | 240 | HGL36015 | 5(*5) | GV2P08 | 240 | 0.33 | 5(*5) | 7 | 5(*5) | - | - | 14 | 14 | |
| VFS15S-2004PL | 240 | HGL36015 | 5(*5) | GV2P10 | 240 | 0.5 | 5(*5) | 15 | 5(*5) | - | - | 14 | 14 | |
| VFS15S-2007PL | 240 | HGL36015 | 5(*5) | GV3P13 | 240 | 2 | 5(*5) | 25 | 5(*5) | - | - | 14 | 14 | |
| VFS15S-2015PL | 240 | HGL36030 | 5(*5) | GV3P25 | 240 | 3 | 5(*5) | 40 | 5(*5) | - | - | 10 | 12 | |
| VFS15S-2022PL | 240 | HGL36035 | 5(*5) | GV3P25 | 240 | 3 | 5(*5) | 45 | 5(*5) | - | - | 10 | 10 | |
| VFS15-4004PL1 | 480 | HJL36015 | 5 | GV2P07 | 480Y/277 | 1 | 5 | 6 | 5 | - | - | 14 | 14 | |
| VFS15-4007PL1 | 480 | HJL36015 | 5 | GV2P08 | 480Y/277 | 2 | 5 | 6 | 5 | - | - | 14 | 14 | |
| VFS15-4015PL1 | 480 | HJL36015 | 5 | GV2P10 | 480Y/277 | 3 | 5 | 12 | 5 | - | - | 14 | 14 | |
| VFS15-4022PL1 | 480 | HJL36015 | 5 | GV2P14 | 480Y/277 | 5 | 5 | 15 | 5 | - | - | 14 | 14 | |
| VFS15-4037PL1 | 480 | HJL36015 | 5 | GV3P13 | 480Y/277 | 7.5 | 5 | 25 | 5 | - | - | 12 | 14 | |
| VFS15-4055PL | 480 | HJL36020 | 22 | GV3P18 | 480Y/277 | 7.5 | 22 | 40 | 22 | - | - | 10 | 10 | |
| VFS15-4075PL | 480 | HJL36030 | 22 | GV3P25 | 480Y/277 | 15 | 22 | 40 | 22 | - | - | 8 | 10 | |
| VFS15-4110PL | 480 | HJL36040 | 22 | GV3P32 | 480Y/277 | 20 | 22 | 60 | 22 | - | - | 8 | 10 | |
| VFS15-4150PL | 480 | HJL36050 | 22 | GV3P40 | 480Y/277 | 25 | 22 | 60 | 22 | - | - | 6 | 10 | |
| VFS15-4185PL | 480 | HJL36060 | 22 | GV3P50 | 480Y/277 | 30 | 22 | 70 | 22 | - | - | 4 | 8 | |
| VFS15-4220PL | 480 | HJL36070 | 22 | GV3P50 | 480Y/277 | 30 | 22 | 80 | 22 | - | - | 4 | 8 | |

For the enclosure volume, it must be minimum 53L(Liter) for inverter rated at 15kW or less, and minimum 63L(Liter) for inverter rated at 18.5kW and 22kW.

The enclosure mounting an inverter are a Type 1, 4(X) or 12 rated enclosure, only for the indoor usage.

Minimum enclosure volume allows for specified SCCR. Thermal requirements may require a larger enclosure.

The ampere rating of the short circuit protection devices in the table are maximum values.

Smaller ampere sizes can be used.

In case of using with a higher Short Circuit Current Ratings (SCCR) up to 100kA (up to 22kA for 600V class), it is available by installing with the circuit breakers, GV□P or the fuses in the condition listed in Table 4.

Table 4 High SCCR condition of Fuses, Circuit breakers, line inductance and Wire sizes, with Enclosure

| Table 4 - High Short-Circuit Contribution for Uses, Circuit Breakers, Line Inductance and Wire Sizes, with Enclosure | | | | | | | | | | | | | | | |
|--|----------|---------------------------|----|-----------|----------------|-------|------|--------------|--------|------|-----------------|---------------|--------|-------------|------|
| Inverter model | Volt-age | Branch circuit protection | | | | | | | | | | (*4) | | Cable sizes | |
| | | With Circuit breaker | | With GV□P | | | | | (*1) | | Line inductance | Power circuit | Earth | | |
| | | Type-Form | SC | Type-Form | Voltage Rating | Power | SC | 600V Class J | Rating | SCCR | | | | | |
| | | | | | | | | | | | | | | (*)2 | (*)3 |
| Marking | Y | Z1, Z2 | X | Type E | (V) | (HP) | (kA) | (A) | (kA) | mH | A | (AWG)- | (AWG)- | | |
| VFS15-2002PM | 240 | HGL36015 | 65 | GV2P08 | 240 | 0.75 | 65 | 5 | 100 | 6.4 | 1 | 14 | 14 | | |
| VFS15-2004PM | 240 | HGL36015 | 65 | GV2P08 | 240 | 0.75 | 65 | 7 | 100 | 6.4 | 1.6 | 14 | 14 | | |
| VFS15-2007PM | 240 | HGL36015 | 65 | GV2P10 | 240 | 1.5 | 65 | 15 | 100 | 6.4 | 3.1 | 14 | 14 | | |
| VFS15-2015PM | 240 | HGL36015 | 65 | GV2P14 | 240 | 3 | 65 | 25 | 100 | 1.5 | 6 | 14 | 14 | | |
| VFS15-2022PM | 240 | HGL36020 | 65 | GV3P18 | 240 | 5 | 65 | 25 | 100 | 1 | 9 | 12 | 14 | | |
| VFS15-2037PM | 240 | HGL36030 | 65 | GV3P25 | 240 | 7.5 | 65 | 45 | 100 | 0.8 | 15 | 10 | 10 | | |
| VFS15-2055PM | 240 | HGL36040 | 65 | GV3P40 | 240 | 10 | 65 | 60 | 100 | 0.5 | 21 | 8 | 10 | | |
| VFS15-2075PM | 240 | HGL36050 | 65 | GV3P50 | 240 | 10 | 65 | 70 | 100 | 0.4 | 28 | 6 | 10 | | |
| VFS15-2110PM | 240 | HGL36070 | 65 | GV3P65 | 240 | 15 | 65 | 100 | 100 | 0.3 | 41 | 6*2 | 8 | | |
| VFS15-2150PM | 240 | HGL36090 | 65 | GV4PB80S | 240 | 20 | 65 | 100 | 100 | 0.2 | 55 | 6*2 | 8 | | |
| VFS15S-2002PL | 240 | HGL36015 | 65 | GV2P08 | 240 | 0.33 | 65 | 7 | 100 | 2.5 | 3 | 14 | 14 | | |
| VFS15S-2004PL | 240 | HGL36015 | 65 | GV2P10 | 240 | 0.5 | 65 | 15 | 100 | 2.5 | 5 | 14 | 14 | | |
| VFS15S-2007PL | 240 | HGL36015 | 65 | GV3P13 | 240 | 2 | 65 | 25 | 100 | 2.5 | 7 | 14 | 14 | | |
| VFS15S-2015PL | 240 | HGL36030 | 65 | GV3P25 | 240 | 3 | 65 | 40 | 100 | 1 | 13 | 10 | 12 | | |
| VFS15S-2022PL | 240 | HGL36035 | 65 | GV3P25 | 240 | 3 | 65 | 45 | 100 | 1 | 18 | 10 | 10 | | |
| VFS15-4004PL1 | 480 | HJL36015 | 65 | GV2P07 | 480Y/277 | 1 | 65 | 6 | 100 | 12 | 1 | 14 | 14 | | |
| VFS15-4007PL1 | 480 | HJL36015 | 65 | GV2P08 | 480Y/277 | 2 | 65 | 6 | 100 | 12 | 1.7 | 14 | 14 | | |
| VFS15-4015PL1 | 480 | HJL36015 | 65 | GV2P10 | 480Y/277 | 3 | 65 | 12 | 100 | 6.8 | 3.2 | 14 | 14 | | |
| VFS15-4022PL1 | 480 | HJL36015 | 65 | GV2P14 | 480Y/277 | 5 | 65 | 15 | 100 | 5 | 4.7 | 14 | 14 | | |
| VFS15-4037PL1 | 480 | HJL36015 | 65 | GV3P13 | 480Y/277 | 7.5 | 65 | 25 | 100 | 3 | 8 | 12 | 14 | | |
| VFS15-4055PL | 480 | HJL36020 | 65 | GV3P18 | 480Y/277 | 7.5 | 65 | 40 | 100 | 2.5 | 11 | 10 | 10 | | |
| VFS15-4075PL | 480 | HJL36030 | 65 | GV3P25 | 480Y/277 | 15 | 65 | 40 | 100 | 1.5 | 15 | 8 | 10 | | |
| VFS15-4110PL | 480 | HJL36040 | 65 | GV3P32 | 480Y/277 | 20 | 65 | 60 | 100 | 1.2 | 22 | 8 | 10 | | |
| VFS15-4150PL | 480 | HJL36050 | 65 | GV3P40 | 480Y/277 | 25 | 65 | 60 | 100 | 0.8 | 29 | 6 | 10 | | |
| VFS15-4185PL | 480 | HJL36060 | 65 | GV3P50 | 480Y/277 | 30 | 65 | 70 | 100 | 0.7 | 36 | 4 | 8 | | |
| VFS15-4220PL | 480 | HJL36070 | 65 | GV3P50 | 480Y/277 | 30 | 65 | 80 | 100 | 0.7 | 42 | 4 | 8 | | |
| VFS15-6015P | 600 | HJL36015 | 22 | GV3P13 | 600Y/347 | 10 | 22 | 6 | 22 | 9 | 2.4 | 14 | 14 | | |
| VFS15-6022P | 600 | HJL36015 | 22 | GV3P13 | 600Y/347 | 10 | 22 | 10 | 22 | 5 | 3.3 | 14 | 14 | | |
| VFS15-6037P | 600 | HJL36015 | 22 | GV3P13 | 600Y/347 | 10 | 22 | 15 | 22 | 5 | 6 | 14 | 14 | | |
| VFS15-6055P | 600 | HJL36025 | 22 | GV3P13 | 600Y/347 | 10 | 22 | 20 | 22 | 2.5 | 8 | 14 | 14 | | |
| VFS15-6075P | 600 | HJL36030 | 22 | GV3P18 | 600Y/347 | 10 | 22 | 25 | 22 | 2.5 | 11 | 14 | 14 | | |
| VFS15-6110P | 600 | HJL36045 | 22 | GV3P25 | 600Y/347 | 20 | 22 | 35 | 22 | 1.2 | 16 | 10 | 12 | | |
| VFS15-6150P | 600 | HJL36060 | 22 | GV3P32 | 600Y/347 | 25 | 22 | 45 | 22 | 1.2 | 22 | 10 | 10 | | |

For the enclosure volume, it must be minimum 53L(Liter) for inverter rated at 15kW or less, and minimum 63L(Liter) for inverter rated at 18.5kW and 22kW.

The enclosure mounting an inverter are a Type 1, 4(X) or 12 rated enclosure, only for the indoor usage.

Minimum enclosure volume allows for specified SCCR. Thermal requirements may require a larger enclosure.

The ampere rating of the short circuit protection devices in the table are maximum values.

Smaller ampere sizes can be used.

(*1) Use Class CC or J fast acting or time delay with any manufacturer.

(*2) The manufacturer of the listed circuit breaker is "Schneider Electric".

(*3) For GV2P and GV3P use, 480 V and 600V ratings are for Wye connected electrical distribution systems.

GV2P self-protected manual combination starter must be used with GV2GH7 insulating barrier to meet Type E rating.

GV3P self-protected manual combination starter must be used with GV3G66 + GVAM11 insulating barrier and auxiliary contact to meet Type E rating. The GVAM11 provides a visual indication if the GV3P has tripped.

GV3P self-protected manual combination starter with connection by lugs that added the digit 6 to the end of reference must be used with LAD96570 (2 pieces) + GVAM11 to meet Type E rating.

UL61800-5-1 require publishing the standard Type E combination motor controller power rating since this is a basic identification marking of type E devices.

However, when applied as an input overcurrent protective device for a drive, the rated current of the Type E combination motor controller, not the rated power, is the key parameter for dimensioning.

GV□P Type E combination motor controllers are adjustable, their current range is shown on the adjustment dial and their selection is based on the input current and not the power rating of the drive.

(*4) Reactor is RLW series of "MTE corporation" or from "Schneider Electric", do not substitute.


Reactor selection must be satisfied to the line inductance minimum values in the table.

(*5) Although SCCR is 5 kA, the thermal design is for 1 kA. For applying SCCR up to 5 kA, reduce the load or install the line inductance not to exceed the rated input current.


Main and control circuit terminals

This diagram shows an example of wiring of the main and control circuit (in case of sink logic).

Standard connection diagram – SINK with internal supply (Negative) (common: CC)

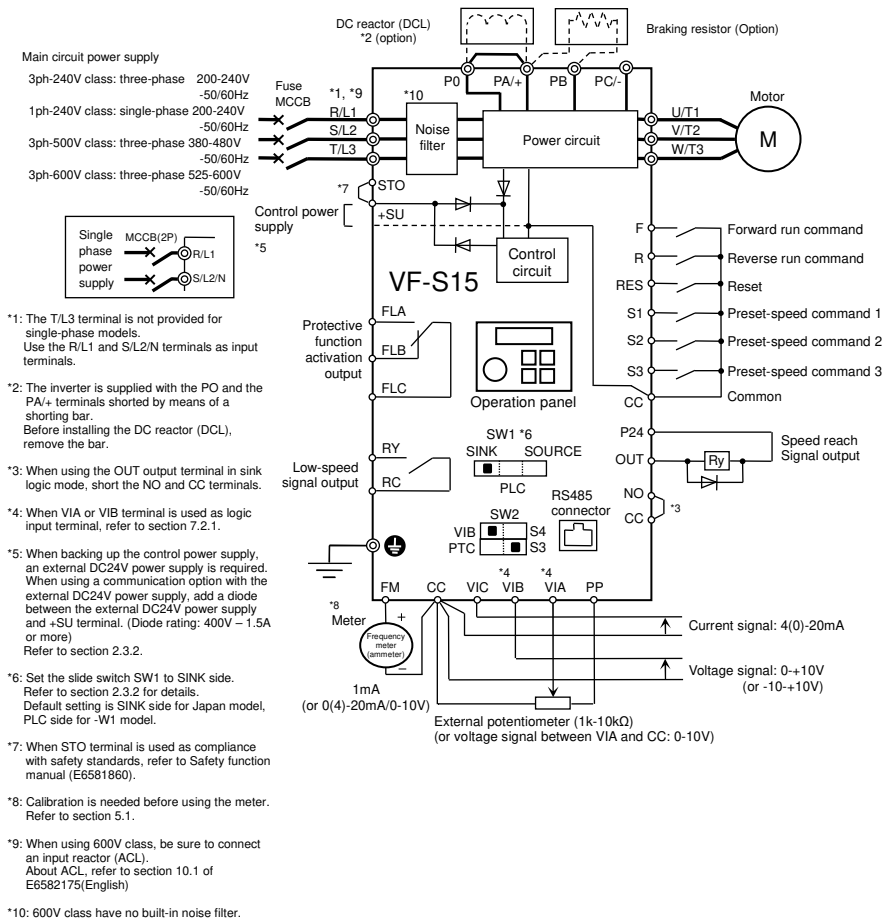


Main circuit terminals

| Terminal symbol | Terminal function |
|---|--|
|  | Grounding terminal for connecting inverter. There are 3 terminals in cooling fin or mounting part of EMC plate. |
| R/L1, S/L2, T/L3 | 200/240 V class : Three-phase 200 to 240V-50/60Hz : Single-phase 200 to 240V-50/60Hz 400/500 V class : Three-phase 380 to 480V(UL)-50/60Hz 600V class : Three-phase 525 to 600V-50/60Hz * Single-phase inputs are R/L1 and S/L2/N terminals. |
| U/T1, V/T2, W/T3 | Connect to three-phase motor. |
| PA/+, PB | Connect to braking resistors. |
| PA/+ | This is a positive potential terminal in the internal DC main circuit. DC common power can be input between PA/+ terminal and PC/- terminal. |
| PC/- | This is a negative potential terminal in the internal DC main circuit. DC common power can be input between PC/- terminal and PA/+ terminal. |
| PO, PA/+ | Terminals for connecting a DC reactor (DCL: optional external device). Shorted by a shorting bar when shipped from the factory. Before installing DCL, remove the shorting bar. |

The arrangements of power circuit terminals are different from each range.

Control circuit terminals

The control circuit terminal block is common to all equipment.

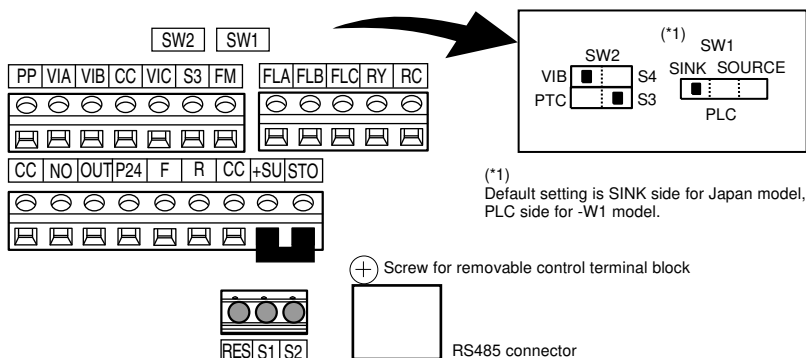

| Screw size | Recommended tightening torque |
|------------|-------------------------------|
| M3 screw | 0.5 N·m 4.4 lb·in |

Stripping length: 6 (mm)
Screwdriver: Small-sized flat-blade screwdriver
(Blade thickness: 0.5 mm, blade width: 3.5 mm)

| Terminal symbol | Input / output | Function | | Electrical specifications |
|------------------|--------------------------|---|--|--|
| F | Input | Multifunction programmable logic input | Shorting across F-CC or P24-F causes forward rotation; open causes deceleration stop. (When Standby ST is always ON) 3 different functions can be assigned. | No voltage logic input 24Vdc-5mA or less |
| R | Input | | Shorting across R-CC or P24-R causes reverse rotation; open causes deceleration stop. (When Standby ST is always ON) 3 different functions can be assigned. | Sink/Source and PLC selectable using slide switch SW1 (Default setting is Sink side) |
| RES | Input | | This inverter protective function is reset if RES-CC or P24-RES is connected. Shorting RES-CC or P24-RES has no effect when the inverter is in a normal condition. 2 different functions can be assigned. | |
| S1 | Input | | Shorting across S1-CC or P24-S1 causes preset speed operation. 2 different functions can be assigned. | Pulse train input (S2 terminal) Pulse frequency range: 10pps~2kpps Duty: 50±10% |
| S2 | Input | | Shorting across S2-CC or P24-S2 causes preset speed operation. By changing parameter F146 setting, this terminal can also be used as a pulse train input terminal. | |
| S3 | Input | | Shorting across S3-CC or P24-S3 causes preset speed operation. By changing slide switch SW2 and parameter F147 setting, this terminal can also be used as a PTC input terminal. | PTC input (S3 terminal) |
| CC | Common to Input / output | Control circuit's equipotential terminal (3 terminals) | | - |
| PP | Output | Analog power supply output | | 10Vdc (permissible load current: 10mA _{dc}) |
| V I A Note 1) | Input | Multifunction programmable analog input. Default setting: 0-10Vdc (1/1000 resolution) and 0-60Hz (0-50Hz) frequency input. By changing parameter F109, this terminal can also be used as a multifunction programmable logic input terminal. | | 10Vdc (internal impedance: 30kΩ) |
| V I B Note 1) | Input | Multifunction programmable analog input. Default setting: 0-10Vdc (1/1000 resolution) and 0-60Hz (0-50Hz) frequency input. The function can be changed to -10~+10V input (1/2000 resolution) by parameter F107 =1 setting. By switching slide switch SW2 and changing parameter F109 setting, this terminal can also be used as a multifunction programmable logic input terminal. | | 10Vdc (internal impedance: 30kΩ) |
| V I C | Input | Multifunction programmable analog input. 4-20mA (0-20mA) input. | | 4-20mA (internal impedance: 250Ω) |
| FM | Output | Multifunction programmable analog output. Default setting: output frequency. The function can be changed to meter option (0-1mA), 0-10Vdc voltage or 0-20mA _{dc} (4-20mA) current output by parameter F681 setting. Resolution Max. 1/1000. | | 1mA _{dc} full-scale ammeter 0-20mA (4-20mA) DC ammeter Permissible load resistance: 600Ω or less 0-10V DC volt meter Permissible load resistance: 1kΩ or more |

| Terminal symbol | Input / output | Function | Electrical specifications |
|---|----------------|--|---|
| P24 | Output | 24Vdc power output, by changing SW1 to SINK or SOURCE side. | 24Vdc-100mA |
| | Input | This terminal can be used as a common terminal when an external power supply is used by changing SW1 to PLC side. | - |
| +SU | Input | DC power input terminal for operating the control circuit. Connect a control power backup device (option or 24Vdc power supply) between +SU and CC. | Voltage: 24Vdc \pm 10% Current: 1A or more |
| | Output | It is used with STO for safety function. +SU and STO terminals are short-circuited by metal bar and the inverter is put into a standby state at default setting. When the circuit between them is opened, the motor is coasting stop. | - |
| STO Note 2) | Input | When +SU and STO are short-circuited, the inverter is put into a standby state. (Default setting) And when the circuit between them is opened, the motor is coasting stop. These terminals can be used for inter lock. This terminal is not a multifunction programmable input terminal. It is a terminal with the safety function that complies with SIL II of the safety standard IEC61508. | Independently of SW1 ON: DC17V or more OFF: DC12V or less (OFF: Coast stop) |
| OUT NO | Output | Multifunction programmable open collector output. Default setting detect and output speed reach signal. Multifunction output terminals to which two different functions can be assigned. The NO terminal is an equipotential terminal. It is isolated from the CC terminal. By changing parameter F669 settings, these terminals can also be used as multifunction programmable pulse train output terminals. | Open collector output 24Vdc-100mA To output pulse trains, a current of 10mA or more needs to be passed. Pulse frequency range: 10-2kpps |
| FLA FLB FLC Note 3) Note 4) | Output | Multifunction programmable relay contact output. Detects the operation of the inverter's protection function. Contact across FLA-FLC is closed and FLB-FLC is opened during protection function operation. | Max. switching capacity 250Vac-2A, 30Vdc-2A (cos ϕ =1) : at resistive load |
| RY RC Note 3) Note 4) | Output | Multifunction programmable relay contact output. Default settings detect and output low-speed signal output frequencies. Multifunction output terminals to which two different functions can be assigned. | 250Vac-1A (cos ϕ =0.4) 30Vdc-1A (L/R=7ms) Min. permissible load 5Vdc-100mA 24Vdc-5mA |

Note 1) When VIA terminal is used as logic input terminal, be sure to connect a resistor between P24 and VIA in case of sink logic, between VIA and CC in case of source logic. (Recommended resistance: 4.7k Ω -1/2W)
It is not needed for VIB terminal.

Note 2) When STO terminal is used as the safety function, refer to E6581860 "VF-S15 Safety function manual".

Note 3) A chattering (momentary ON/OFF of contact) is generated by external factors of the vibration and the impact, etc. In particular, please set the filter of 10ms or more, or timer for measures when connecting it directly with input unit terminal of programmable controller. Please use the OUT terminal as much as possible when the programmable controller is connected.

Note 4) OVC II: Overvoltage category II

4. Overload protection

VF-S15 has overload protection.

Over current rating: 150%-1min. 200%-0.5sec.

Refer to the nameplate for the rated current.

Refer to the instruction manual E6581610(Japanese), E6581612(Japanese) or E6582175(English) for detailed information.

5. Motor thermal protection

CAUTION / ATTENTION

- Risk to damage the motor -

Motor thermal protection will not be provided by the drive if the motor's nominal current is 20% lower than that output of the drive.

In this case, find an alternative source of thermal protection.

Failure to follow these instructions can result in equipment damage.

(- Risque d'endommagement du moteur -)

(La protection thermique du moteur ne sera pas assurée par le variateur si son courant nominal est inférieur de 20 % à celui de sortie du variateur.

Dans ce cas, recherchez une autre source de protection thermique.

Le non-respect de ces instructions peut entraîner des dommages matériels.)

The devices VF-S15 are provided with integral overload for the motor after activation of this function by setting. Protection at 100% of the full load motor current.

The motor thermal protection current (tHr) must be set to the rated current indicated on the motor nameplate.

VF-S15 has the motor thermal protection.

Select the electronic thermal protection characteristics that fit with the ratings and characteristics of the motor.

In case of multi motor operation with one inverter, thermal relay should be connected to each motor.

| | |
|-------------|--|
| tHr | : Motor electronic-thermal protection level 1 |
| OLM | : Electronic-thermal protection characteristic selection |
| F173 | : Motor electronic-thermal protection level 2 |
| F606 | : Motor overload reduction frequency threshold |
| F607 | : Motor 150% overload detection time |
| F631 | : Inverter overload detection method |
| F632 | : Electronic-thermal memory |
| F657 | : Overload alarm level |

• Function

This parameter allows selection of the appropriate electronic thermal protection characteristics according to the particular rating and characteristics of the motor.

[Parameter setting]

| Title | Function | Adjustment range | | | | Default setting |
|-------|--|--|--------------------------|---------------------|----------------|-----------------|
| tHr | Motor electronic-thermal protection level 1 | 10 – 100 (%) | | | | 100 |
| OLM | Electronic-thermal protection characteristic selection | Setting value | Standard motor | Overload protection | Overload stall | 0 |
| | | 0 | | valid | invalid | |
| | | 1 | | valid | valid | |
| | | 2 | | invalid | invalid | |
| | | 3 | | invalid | valid | |
| | | 4 | VF motor (special motor) | valid | invalid | |
| | | 5 | | valid | valid | |
| | | 6 | | invalid | invalid | |
| 7 | invalid | valid | | | | |
| F173 | Motor electronic-thermal protection level 2 | 10 – 100 (%) / (A) | | | | 100 |
| F606 | Motor overload reduction frequency threshold | 0.0 – 60.0 (Hz) | | | | 6.0 |
| F607 | Motor 150% overload detection time | 10 – 2400 (s) | | | | 300 |
| F631 | Inverter overload detection method | 0: 150%-60s 1: Temperature estimation | | | | 0 |
| F632 | Electronic-thermal memory | 0: Disabled (tHr, F173) 1: Enabled (tHr, F173) 2: Disabled (tHr) 3: Enabled (tHr) | | | | 0 |
| F657 | Overload alarm level | 10-100 | | | | 50 |

Note) (Only for -W1 model)

AUL must be set to default setting (1: Constant torque characteristic) for the compliance with UL standard.

Note) F606 is available from CPU1 version 130 (Ver.130) or later. For Ver.128 or before, F606 doesn't exist and the threshold is fixed at 6Hz.

1) Setting the electronic thermal protection characteristics selection **OLM** and motor electronic thermal protection level 1 **tHr** 2 **F173**

The electronic thermal protection characteristics selection (OLM) is used to enable or disable the motor overload trip function (OL2) and the overload stall function.

While the inverter overload trip (OL1) will be in constantly detective operation, the motor overload trip (OL2) can be selected using the parameter OLM

Explanation of terms

Overload stall: This is an optimum function for equipment such as fans, pumps and blowers with variable torque characteristics that the load current decreases as the operating speed decreases.

When the inverter detects an overload, this function automatically lowers the output frequency before the motor overload trip (OL2) is activated. With this function, operation can be continued, without tripping, by operating using a frequency balanced by load current.

Note: Do not use the overload stall function with loads having constant torque characteristics (such as conveyor belts in which load current is fixed with no relation to speed).

[Using standard motors (other than motors intended for use with inverters)]


When a motor is used in the lower frequency range than the rated frequency, that will decrease the cooling effects for the motor. This speeds up the start of overload detection operations when a standard motor is used in order to prevent overheating.

■ Setting of electronic thermal protection characteristics selection **OLM**

| Setting value | Overload protection | Overload stall |
|---------------|---------------------|----------------|
| 0 | valid | invalid |
| 1 | valid | valid |
| 2 | invalid | invalid |
| 3 | invalid | valid |

- Setting of motor electronic thermal protection level 1 $\overline{\text{tHr}}$ (Same as $\overline{\text{F173}}$)

When the capacity of the motor in use is smaller than the capacity of the inverter, or the rated current of the motor is smaller than the rated current of the inverter, adjust thermal protection level 1 $\overline{\text{tHr}}$ for the motor in accordance with the motor's rated current.

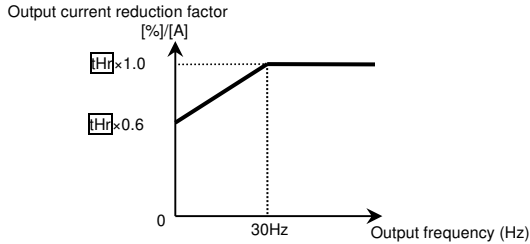

Note: The motor overload protection start level is fixed at 30Hz.

[Using a VF motor (motor for use with inverter)]

- Setting of electronic thermal protection characteristics selection $\overline{\text{OLM}}$

| Setting value | Overload protection | Overload stall |
|---------------|---------------------|----------------|
| 4 | valid | invalid |
| 5 | valid | valid |
| 6 | invalid | invalid |
| 7 | invalid | valid |

- Setting of Motor overload reduction frequency threshold $\overline{\text{F606}}$

VF motors (motors designed for use with inverters) can be used in frequency ranges lower than those for standard motors, but an extremely low speed will cause the cooling effect of the motor to decrease.

Set the value of $\overline{\text{F606}}$ (Motor overload reduction frequency threshold) suited for the motor characteristic.


We recommend that it be set to around 6 Hz (default setting) (refer to the following figure).

Note) $\overline{\text{F606}}$ is available from CPU1 version 130 (Ver.130) or later. For Ver.128 or before, $\overline{\text{F606}}$ doesn't exist, and the threshold is fixed at 6Hz.

- Setting of motor electronic thermal protection level 1 $\overline{\text{tHr}}$ (Same as $\overline{\text{F173}}$)

If the capacity of the motor is smaller than the capacity of the inverter, or the rated current of the motor is smaller than the rated current of the inverter, adjust the electronic thermal protection level 1 $\overline{\text{tHr}}$ so that it fits the motor's rated current.

* If the indications are in percentages (%), then 100% equals the inverter's rated output current (A).

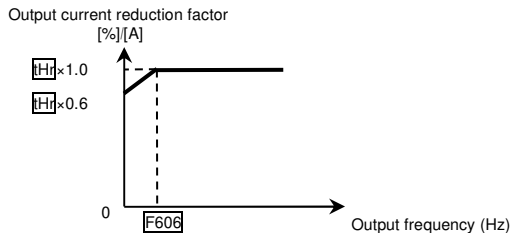

- Motor 150%-overload detection time $\overline{\text{F607}}$

Do not change this parameter from default setting.

3) Inverter overload detection method F631

As this function is set to protect the inverter unit, this function cannot be turned off by parameter setting.

The inverter overload detection method can be selected using parameter F631 (Inverter overload detection method). If the inverter overload trip function (OL1) is activated frequently, this can be improved by adjusting the stall operation level F601 downward or increasing the acceleration time ACC or deceleration time DEC.

- F631=0 (150%-60s)

Protection is given uniformly regardless of temperature by the 150%-60 sec overload curve.

- F631=1 (Temperature estimation)

This parameter adjusts automatically overload protection, predicting the inverter internal temperature rise.

4) Electronic thermal memory F632

When the power is OFF, it is possible to reset or maintain the overload totaling level.

This parameter's settings are applied both to the motor's electronic thermal memory and the electronic thermal memory for inverter protection.

5) Overload alarm level F657

When the motor overload level reaches to F657 setting value (%) of overload trip (OL2) level, "I" will be displayed on the left side digit and the "I" and output frequency monitor will be blinking alternately on overload alarm status.

Overload alarm signal can be output from output terminal.

6. Motor PTC thermal protection

Set a parameter F147 and lower slide switch of SW2 to PTC side, when S3 terminal is used as PTC input terminal.

F147: Logic input / PTC input selection (S3)

F645: PTC thermal selection

F646: Resistor value for PTC detection

- Function

This function is used to protect motor from overheating using the signal of PTC built-in motor.

The trip display is "E-32".


[Parameter setting]

| Title | Function | Adjustment range | Default setting |
|-------|--|--------------------------------|-----------------|
| F147 | Logic input / PTC input selection (S3) | 0: Logic input 1: PTC input | 0 |
| F645 | PTC thermal selection | 1: Tripping 2: Alarm only | 1 |
| F646 | PTC detection resistor value | 100-9999 (Ω) | 3000 |

Note : Protecting PTC thermal, set F147=1 (PTC input) and slide switch SW2 to PTC side.

- Tripping level is defined by F646 setting. Alarm level is defined by 60% of F646 setting.
- Connect the PTC between S3 and CC terminals. Detection temperature can be set by F646 setting.

[Connection]

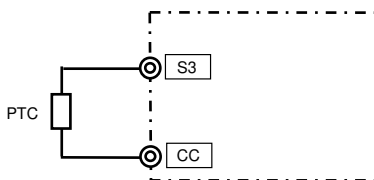

- Output of PTC input alarm signal

The PTC input alarm is assigned to the output terminal by setting the parameter of the output terminal selection function to 150 or 151.

7. Ground fault detection function

To comply UL61800-5-1, set ground fault detection selection (F614) to 1 "Enabled".

8. Other



WARNING / AVERTISSEMENT

Operation of this equipment requires detailed installation and operation instructions provided in the hardware manual intended for use with this product.

This information is provided included in the container this device was packaged in.

This information should be retained with this device at all times.

(L'utilisation de cet équipement nécessite des instructions d'installation et d'utilisation détaillées, fournies dans le manuel du matériel destiné à être utilisé avec ce produit.

Ces informations sont fournies dans l'emballage de l'appareil.

Elles doivent être conservées avec cet appareil en permanence.)

If you need the hard copy (paper) of E6581612 (Japanese) and E6582175 (English), please contact to phone number of back cover in E6581610 (Japanese) E6581928 (English) or E6582433 (Japanese/ English).